



USER'S GUIDE

5" Smart HD Baby Monitor with Touch Screen Viewer

Model: OBH36T

The Features described in this user's guide are subject to modifications without prior notice.

Welcome...

to your new Oricom Smart Baby Monitor!

Thank you for purchasing your new Oricom Smart Nursery product. Now you can see and hear your baby sleeping in another room or you can monitor your older children in their playroom.

Please retain your original dated sales receipt for your records.

For warranty service of your Hubble product, you will need to provide a copy of your dated sales receipt to confirm warranty status. Registration is not required for warranty coverage.

For product related questions, please contact:

Australia:

(02) 4574 8888 / Monday - Friday 8am – 6pm AEST

Email: support@oricom.com.au / www.oricom.com.au

New Zealand:

0800 674 266 / Monday - Friday 10am - 8pm NZST

Email: support@oricom.co.nz

 
Visit **support@oricom.com.au** to download the User Guide with instructions, answers to frequently asked questions, and more to help you get the most from your product.

Got everything?

- 1 x Parent Unit
- 1 x Baby Unit (Camera)
- 1 x Power adapter for Parent Unit
- 1 x Power adapter for Baby Unit
- 1 x Bumper
- 1 x Quick Start Guide

In multi-camera packs, you will find one or more additional Baby Units with power adapters.

Overview of the Parent Unit

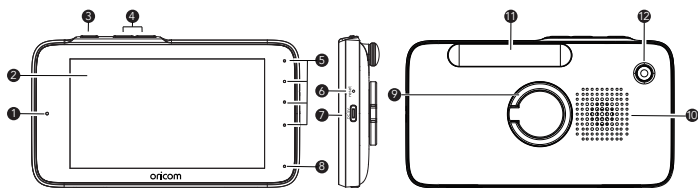


1. Microphone
2. Touch screen display
3. Power button
Press and Hold to turn the Parent Unit ON/OFF.
Once press to turn the Power Saving Mode ON/OFF.
4. Volume Up/Down button
Press to decrease / increase Volume level.
5. Sound Level LEDs (Green, Green, Amber, Red)
6. Reset pin hole (recessed - use small pin)
7. Power Socket
8. Power LED
RED when Power OFF charging.
GREEN when Power ON with battery only.
ORANGE when Power ON charging.
9. Ring Stand
10. Speaker
11. Antenna
12. Flashlight

Display icons

	Signal Level (4 Levels)
	Night Vision Mode (Video also changes to Black/White).
	Indicates the screen off timer is set.
	Volume Level Control (8 Levels).
	No Baby Unit detected.
	Battery Level Indication (4 Levels).

 Overview of Your Baby Unit

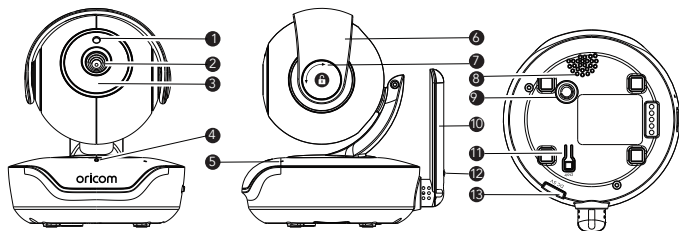

- | | |
|---|--------------------------------------|
| 1. Light Sensor | 7. Protector Release Knob |
| 2. Camera Lens | 8. Speaker |
| 3. Infrared LEDs | 9. Flexible Grip mounting screw hole |
| 4. Power LED
On when linked to Parent Unit
Flashes when searching for Parent Unit | 10. Antenna |
| 5. Microphone | 11. PAIR button |
| 6. Privacy Protector | 12. Temperature Sensor |
| | 13. Power Socket |

Important guidelines for installing your Nursery Pal Premium

- To use your Video Monitor Baby and Parent Units together, you must be able to establish a radio link between them, and the range will be affected by environmental conditions.
- Any large metal object, like a refrigerator, a mirror, a filing cabinet, a metallic door or reinforced concrete, between the Baby Unit and Parent Unit may block the radio signal.
- The signal strength may also be reduced by other solid structures, like walls, or by radio or electrical equipment, such as TVs, computers, cordless or mobile phones, fluorescent lights or dimmer switches.
- Other 2.4GHz products, such as wireless networks (Wi-Fi® routers), Bluetooth™ systems, microwave ovens or other Baby Monitors, may cause interference with this product, so keep the Baby Monitor at least 5ft (1.5m) away from these types of product, or switch them off if they appear to be causing interference.
- If the signal is weak, try moving the Parent and/or the Baby Unit to different positions in the rooms.

Table of contents

1. Safety Instructions	7
2. Getting Started	10
2.1 Connecting the Power Supply of the Baby Unit.....	10
2.2 Connecting the Power Supply of the Parent Unit.	11
2.3 Registration (Pairing).....	12
3. Using the Baby Monitor	13
3.1 Touch screen operation.....	13
3.2 Brightness	14
3.3 Zoom.....	14
3.4 Audio Media	14
3.4.1 Personal Recording Playback.....	14
3.4.2 Lullaby/Soothing Sounds Playback	14
3.4.3 Audio Book (English only) Playback.....	14
3.4.4 Volume Level of Audio Playback.....	15
3.5 Flashlight.....	15
3.6 Alarm.....	15
3.7 Talk Mode.....	15
3.8 Camera Control.....	15
3.8.1 Add (pair) a camera.....	15
3.8.2 View a camera	16
3.8.3 Delete a camera	16
3.8.4 Scan camera	16
3.9 Temperature.....	16
3.10 Power Saving mode.....	17
3.11 View multiple cameras on screen	17
3.12 Games and Videos.....	17




4. Wi-Fi® Internet Viewing	18
4.1 Minimum System Requirements	18
4.2 Getting started - Connecting Devices	18
4.3 Setup	19
4.4 User Account and Camera Setup on Android™ Devices or iPhone®/ iPad®	19
4.4.1 Power ON and Connect the Camera.....	19
4.4.2 Download HubbleClub for Partners App.....	20
4.4.3 Sign up with Hubble on your smart device.....	20
4.4.4 Add the Camera to your account	21
5. Procedure for Resetting the Camera.....	24
6. Disposal of the Device (environment)	24
7. Cleaning	25
8. Help.....	26
9. General Information	28
10. Technical Specifications	32



1. Safety Instructions

WARNING:

 Strangulation Hazard: Children have **STRANGLED** in cords. Keep this cord out of the reach of children (more than 3ft (1m) away). Never use extension cords with AC Adapters. Only use the AC Adapters provided.

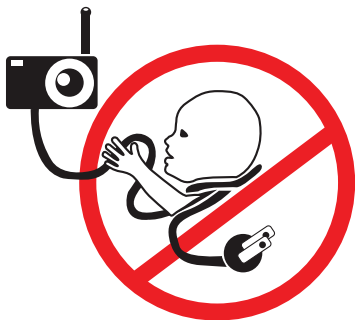

Baby Unit SET UP & USE:

- Choose a location for the Baby Unit that will provide the best view of your baby in their cot.
- Place the Baby Unit on a flat surface, such as a dresser, desk, or shelf or mount the Unit securely using the Flexible Grip (Not Included) or Tripod mount screw hole on the underside of the stand.
- NEVER place the Baby Unit or cords in the cot or within reach of the baby (the unit and cords should be more than 3 feet away).

WARNING

This Smart Baby Monitor is compliant with all relevant standards regarding electromagnetic fields and is, when handled as described in the User's Guide, safe to use. Therefore, always read the instructions in this User's Guide carefully before using the device.

- Adult assembly is required. Keep small parts away from children when assembling.
- This product is not a toy. Do not allow children to play with it.
- This Baby Monitor is not a substitute for responsible adult supervision.
- Keep this User's Guide for future reference.
- Do not place the Baby Unit or cords in the cot or within reach of the baby (the unit and cords should be more than 3 feet away).
- Keep the cords out of reach of children.
- Do not cover the Baby Monitor with a towel, blanket, or other item that will stop air circulation.
- Never use extension cords with power adapters. Only use the power adapters provided.
- Test this monitor and all its functions so that you are familiar with it prior to actual use.
- Do not use the Baby Monitor near water or allow water or other foreign substances to enter the power port or adapter.



- Do not place the Baby Monitor near a heat source.
- Only use the chargers and power adapters provided. Do not use other chargers or power adapters as this may damage the device and battery packs.
- Do not touch the plug contacts with sharp or metal objects.
- The Unit should be set up and used so that parts of the user's body other than the hands are maintained at a distance of approximately 8 inches (20 cm) or more.

 
CAUTION

The Parent Unit includes a built-in, lithium-ion rechargeable battery pack, which is not a user-accessible item. If you think the batteries need replacing, please contact the helpline. Do not try to replace them yourself. Risk of explosion if battery is replaced by an unapproved battery type.



2. Getting Started

2.1 Connecting the Power Supply of the Baby Unit

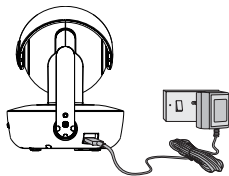

- Connect the USB type-C plug of the power adapter to the Baby Unit and the other end to a suitable electrical outlet.
- Only use the enclosed adapter (5V DC / 1500mA).

Privacy Protector

This is to disable the live camera video feed by blocking the camera lens.

- Press the knob to release the lock.
- You can move the protector to its open and close positions after the lock is released.
- When you hear the click sound the protector is at its proper positions.



 
 
IMPORTANT:

Make sure the privacy protector does not cover the camera lens when in use.

Sound is still audible when the protector covers the camera lens.



2.2 Connecting the Power Supply of the Parent Unit.

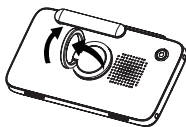

- Connect the USB Type-C plug of the power adapter to the parent unit and the other end to the electrical outlet. Only use the enclosed adapter (5V DC / 1500mA).
- A rechargeable battery (Lithium-ion battery 2100mAh) inside the Parent Unit allows you to move it without losing the link and picture from the Baby Unit. We recommend charging for at least 16 hours before first use, and when the Parent Unit indicates the battery is low.
- Press and hold the POWER button on the top of the Parent Unit to turn it ON.
- Flip out the stand on the back of the Parent Unit and rotate it by 90 degrees to set up the desktop stand.



2.3 Registration (Pairing)

The Baby Monitor is pre-registered to your Parent Unit. You do not need to register it again unless the Baby Unit loses its link with the Parent Unit.

To re-register your Baby Unit, or register a new Baby Unit, follow the procedures below:

1. Tap the  in the menu bar.
2. Tap  and Camera  /  /  /  will pop up.
3. Tap  /  /  /  to select the desired Camera, the parent unit start to search for a camera unit.

Note: *If a camera is currently paired with the Parent Unit, its camera location (in dark grey color) cannot be selected for a new registration.*

4. Press and hold the **PAIR** button on the underside of the Baby Unit until the Parent Unit finds the camera, beeps and **PAIR OK** appears on the screen. The video from the camera will then appear.

 
Note:

A camera can only be registered to one Parent Unit at any one time.




3. Using the Baby Monitor

3.1 Touch screen operation

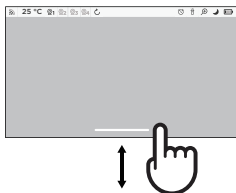

 Swipe up at the screen bottom to pop up the menu bar.
 Swipe down at the screen bottom to hide the menu bar.
 Scroll left/right on the menu bar to see all the options.

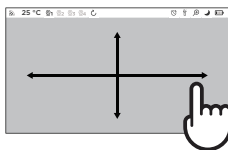

Swipe left/right to pan the camera view.
 Swipe up/down to tilt the camera view.

Note:

- Function works when viewing.
- Function does not work when the menu is active.



3.2 Brightness

1. Tap the  in the menu bar and the brightness status bar will pop up.
2. Tap the  or  to select the desired brightness from level 1 ~ 8. (The default brightness is level 4.)

3.3 Zoom

1. Tap the  in the menu bar and the zoom status bar will pop up.
2. Tap the  or  button to select 1X to 4X zoom.

3.4 Audio Media

You can playback audio content - Lullabies, Soothing Sounds and Audio Book (English only) on the Baby Unit. You have 4 preloaded lullabies/soothing sounds and 4 audio books in the Baby Unit.

3.4.1 Personal Recording Playback

The unit allows playback of your personal audio to soothe your baby. Before playback, record a personal audio via HubbleClub for Partners App.

1. Tap the  in the menu bar, then the select option will pop up.
2. Tap the  to view the desired Personal Recording. The Personal Recording names appear on the screen.
3. Tap the desired recording to play the selection to soothe your baby.

3.4.2 Lullaby/Soothing Sounds Playback

1. Tap the  in the menu bar, then the select option will pop up.
2. Tap the  to view the desired Lullaby/Soothing Sounds. The song names appear on the screen.
3. Tap the desired Lullaby to play the selection to soothe your baby.

3.4.3 Audio Book (English only) Playback

1. Tap the  in the menu bar, then the select option will pop up.
2. Tap the  to view the desired Audio Book. The book titles appear on the screen.
3. Tap the desired Audio Book to play the selection.



3.4.4 Volume Level of Audio Playback

1. Tap the  in the menu bar, then the select option will pop up.
2. Tap the  or  to select the desired Volume Level from level 1 ~ 4. (The default volume is level 3.)

3.5 Flashlight

Tap the  in the menu bar to turn the flashlight on and the  will appear on the screen. Tap the  on the screen to turn the flashlight off.

3.6 Alarm

1. Tap the  in the menu bar.
2. Tap **on** to turn the alarm on then tap the  or  to select the alarm time.
3. Confirm the alarm time by tapping **set**, the  will appear on status bar.
4. If an alarm time is selected, the Parent Unit will beep for about 60 seconds, press any key to stop the alarm.

3.7 Talk Mode

1. Tap  on the menu bar,  **Touch to Talk** will display on the screen.
2. Tap  to talk to your baby through the Baby Unit's speaker.
3. Tap  to stop talkback.

Note: you will not hear sounds from the baby unit if the talk back mode is on.

3.8 Camera Control

3.8.1 Add (pair) a camera

1. Tap the  in the menu bar.
2. Tap **+** and Camera  /  /  /  will pop up.
3. Tap  /  /  /  to select the desired Camera, the parent unit start to search for a camera unit.

Note: If a camera is currently paired with the Parent Unit, its camera location (in dark grey color) cannot be selected for a new registration.

4. Press and hold the **PAIR** button on the underside of the Baby Unit until the Parent Unit finds the camera, beeps and **PAIR OK** appears on the screen. The video from the camera will then appear.



Note:

A camera can only be registered to one Parent Unit at any one time.

3.8.2 View a camera

1. Tap the  in the menu bar.
2. Tap  and Camera  /  /  /  will pop up.
3. Tap  /  /  /  to select the desired Camera to view the picture from that camera.

3.8.3 Delete a camera

1. Tap the  in the menu bar.
2. Tap  and Camera  /  /  /  will pop up.
3. Tap  /  /  /  to select the desired Camera to delete that registration.

Note:

You are not allowed to delete the camera if there is only one registered camera in the system.

3.8.4 Scan camera

This function is only available when you have more than 1 Baby Unit (Camera).

1. Tap the  in the menu bar.
2. Tap  and Camera  /  /  /  will pop up.
3. The screen will then display images from different registered cameras in a loop of Camera  /  /  / , changing about every 12 seconds.

3.9 Temperature

1. Tap the  in the menu bar, the temperature format **°C** or **°F** will pop up on the screen.
2. Tap **°C** or **°F** to select temperature format.



3.10 Power Saving mode

1. Tap the  in the menu bar, the screen off timer 5 mins, 15 mins or 30 mins will pop up.
2. Select video off after 5 mins, 15 mins or 30 mins (if operating on batteries only).

Note:

The audio will remain and you can press Power key or touch screen to switch the video back on.

3.11 View multiple cameras on screen

This function is only available when you have more than 1 Baby Unit (Camera). When the Split Screen function is On, you can view multiple cameras on the screen.

1. Tap the  in the menu bar.
2. To select Split Screen On or Off please tap on / off.
3. When the Split Screen function is On, you can tap the camera to hear the audio from the selected camera.

3.12 Games and Videos

The unit comes packed with entertaining content (videos, picture books games and more).

Tap  to access Hubble Baby entertaining games and videos.



4. Wi-Fi® Internet Viewing

4.1 Minimum System Requirements

Android™ System

- Version 8.0 or above

iPhone®/iPad® iOS

 
- Version 12.0 or above

High Speed (Wi-Fi®) Internet

- At least 0.6 Mbps upload bandwidth per camera (you can test your internet speed on this site: <http://www.speedtest.net>)

4.2 Getting started - Connecting Devices

How does it work?

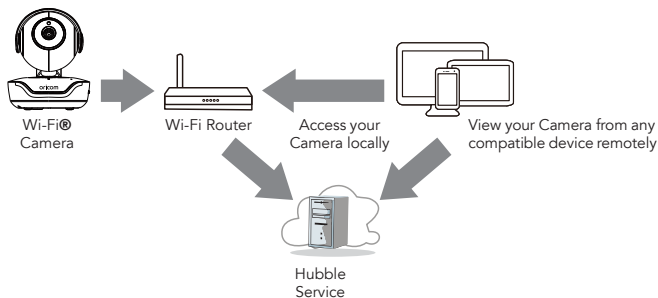

When a user tries to access the Camera, our Hubble server authenticates the user's identity and permits access to the Camera.



4.3 Setup

Connect the Wi-Fi® Camera to the Power Adapter, then plug into mains power. The Camera must be within range of the Wi-Fi® router with which you want to connect. Make sure the password of the router is available for entering during the in-app setup process.

Status of LED Indication:

- Pair / Setup state: LED is Green and Flashing.
- Unconnected state: LED is Red and Flashing.
- Connected state: LED is Green and always on.
- Video streaming: LED is Green and Flashing.

Note: You can only setup via a compatible smartphone or tablet and not via a PC.

4.4 User Account and Camera Setup on Android™ Devices or iPhone®/iPad®

What you need

- Wi-Fi® Camera Unit
- Power adapter for the Camera
- Device with Android™ system version 8.0 and above
- Or iPhone®/iPad® with iOS version 12.0 and above

4.4.1 Power ON and Connect the Camera

- Switch the parent unit off before connect the camera to Wi-Fi®.
- Connect the power adapter to mains power and insert the plug into the power socket on the back of the Camera Unit, the unit turns on.



4.4.2 Download HubbleClub for Partners App



- Scan the QR code with your smart device and download the HubbleClub for Partners from the App Store for iOS devices or from the Google Play™ Store for Android™ devices.
- Install the HubbleClub for Partners on your device.

4.4.3 Sign up with Hubble on your smart device

- Ensure that your smart device is connected to your Wi-Fi® router.
- Run HubbleClub for Partners App, tap Sign Up with Hubble (fig.1), read through the Privacy Policy, Terms and Conditions, by signing up you agree to our terms of service before tap Done (fig.2), enter your account information to sign up with Hubble.

Note:

If you already have a Hubble App account, please tap Log in with Hubble to go to the next steps.

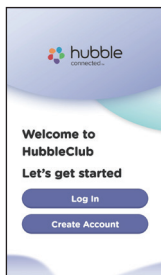 


fig.1

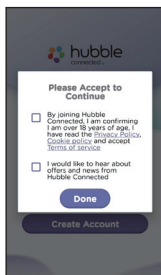 


fig.2



4.4.4 Add the Camera to your account

- Log in your Hubble Account by entering "User Name" and "Password" (fig.3).
- Tap **(+)** on the screen of your device to add new Camera (fig.4)

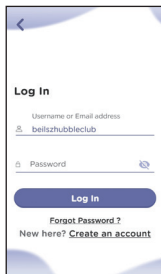 


fig.3



fig.4

- To select your device for setting up by tapping Baby Monitoring (fig.5).
- Tap **OBH36T** to add the new camera (fig.6) .

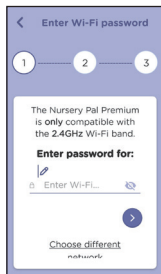 


fig.5

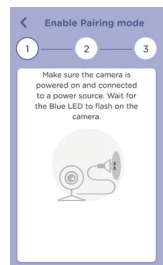 


fig.6



- The following setup instructions will appear on the screen, select your Wi-Fi network and enter "Password" (fig.7).
- Power on your camera and wait for the Red LED flashing on the camera. (fig.8)

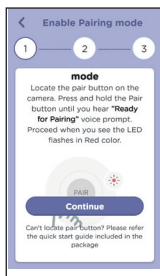 


fig.7

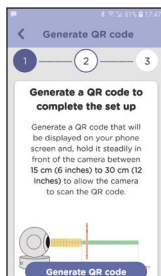 


fig.8

- Press and hold the PAIR button on the bottom of the Camera, you will hear a voice prompt "Ready for Pairing" then tap Continue. (fig.9)
- Tap Generate QR code on your device and hold the QR code 6 to 12 inches in front of Camera to get scanned till you will hear confirmation message "Scanning Success" from your device. (fig.10, fig.11)



fig.9



fig.10

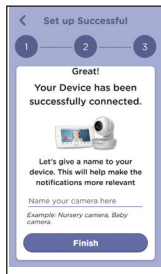 


fig.11



- It will take a few minutes for the Camera to connect to the Wi-Fi® network before showing the connection status (fig.12).
- The Camera has been successfully connected, name your Camera (fig.13).

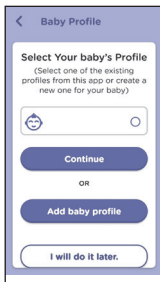 


fig.12

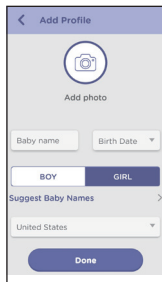 


fig.13

- If connection fails, please tap Retry and repeat the steps starting from 4.4.4.



5. Procedure For Resetting the Camera

Note: If your Camera is moved from one router (e.g. home) to another (e.g. office) or you have Camera setup issues, then the Camera must be reset. Please reset the Camera with the following procedures:

- Press and hold the PAIR button to Power ON unit approximately 20 seconds, you will hear a long beep then release PAIR button, wait for the Camera Unit to complete an internal reset procedure. The Red LED will begin to flash when the Camera Unit is reset successfully.
- You can add your Camera again by following the steps in section 4.4.4.

6. Disposal of the Device (environment)

At the end of the product life cycle, you should not dispose of this product with normal household waste. Take this product to a collection point for the recycling of electrical and electronic equipment. The symbol on the product, user's guide and/or box indicates this.



Some of the product materials can be re-used if you take them to a recycling point. By reusing some parts or raw materials from used products you make an important contribution to the protection of the environment.

Please contact your local authorities in case you need more information on the collection points in your area.

The internal battery should be disposed of with the Parent unit in an environmentally-friendly manner according to your federal, state, and local regulations.



7. Cleaning

Clean the Baby Monitor with a slightly damp cloth or with an anti-static cloth. Never use cleaning agents or abrasive solvents.

Cleaning and care

- Do not clean any part of the product with thinners or other solvents and chemicals – this may cause permanent damage to the product which is not covered by the warranty.
- Keep the Baby Monitor away from hot, humid areas or strong sunlight, and don't let it get wet.
- Every effort has been made to ensure high standards of reliability for your Baby Monitor. However, if something does go wrong, please do not try to repair it yourself – contact Customer Service for assistance.

IMPORTANT

Always switch off and disconnect the power adapter before cleaning your baby monitor.



8. Help

Attempting to repair the baby monitor will void the warranty.

Display

No display

- Try recharging the battery pack.
- Reset the Units. Unplug both the Units' electrical power, then plug them back in.
- Is the Unit switched on?
- Press and hold the ON/OFF button  on the Parent Unit for 3 seconds to switch it ON.
- Is the correct camera selected? Change the camera number, if necessary.
- Is the video display turned on? Press the VIDEO ON/OFF button  to turn it ON.
- When operating using batteries only, the display will go blank after 5 minutes, 15 minutes, or 30 minutes to save power (depending on video settings). The Unit is still active and will give you audio alerts. You can reactivate the screen by pressing any button.

Registration

If the Baby Unit has lost its link with the Parent Unit

- If the Baby Unit is too far away it may be going out of range, so move the Baby Unit closer to the Parent Unit.
- Reset both the Parent Unit and Baby Unit by disconnecting them from the electrical power. Wait about 15 seconds before reconnecting. Allow up to one minute for the Baby Unit and the Parent Unit to synchronize.
- See 2.3 Registration (Pairing), if there is a need to re-register the Units.

Interference

Noise interference on your Parent Unit

- Your Baby and Parent Units may be too close. Move them further apart.
- Make sure there is at least 3 to 6 feet between the 2 Units to avoid audio feedback.



- If the Baby Unit is too far away, it may be out of range. Move the Baby Unit closer to the Parent Unit.
- Make sure that the Baby and Parent Units are not near other electrical equipment, such as a television, computer or cordless/mobile telephone. Move the Baby Unit or Parent Unit 5 feet away from other electrical equipment.
- Use of other 2.4 GHz products, such as wireless networks (Wi-Fi® routers), Bluetooth™ systems, or microwave ovens, may cause interference with this product. Keep the Baby Unit or Parent Unit at least 5 feet away from these types of products, or switch them off if they appear to be causing interference.
- If the signal is weak, try moving the Parent and/or Baby Unit to different positions in the rooms.

Noise interference on your device

- To avoid background noise or echoes, ensure that there is enough distance between your device and the Wi-Fi® Camera Unit.
- Use of other 2.4 GHz products, such as Bluetooth™ systems or microwave ovens, may cause interference with this product. Keep the Wi-Fi® Camera Unit at least 3 feet away from these types of products, or switch them off if they appear to be causing interference.

Lost connection

- Check your Wi-Fi® settings. If necessary, reconnect your Wi-Fi®. Ensure that the Wi-Fi® Camera Unit is switched ON. Wait a few minutes to make the connection with the Wi-Fi® system.

If you forgot your password

- If you do not remember your password, tap Forgot Password and submit your e-mail address. A new password will be sent to your e-mail address immediately.



9. General Information

Express Warranty (Australia)

This Express Warranty is provided by Oricom International Pty Ltd ABN 46 086 116 369, Unit 1, 4 Sovereign Place, South Windsor NSW 2756, herein after referred to as "Oricom".

Oricom warrants that the product is free from defects in materials or workmanship during the Express Warranty Period. This Express Warranty does not extend to any product from which the serial number has been removed or was purchased outside of Australia.

The benefits of this Express Warranty are in addition to other rights and remedies you may have under the Australian Consumer Law. Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure. In the event of a minor failure, Oricom reserves the right to choose to repair or replace the product.

The Express Warranty Period will be a period of 24 months beginning on the date of purchase of the product evidenced by your dated sales receipt. You are required to provide proof of purchase as a condition of receiving Express Warranty services.

You are entitled to a replacement product or repair of the product at our discretion according to the terms and conditions of this document if your product is found to be faulty within the Express Warranty Period. This Express Warranty extends to the original purchaser only and is not transferable.



Products distributed by Oricom are manufactured using new materials or new and used materials equivalent to new in performance and reliability. Spare parts may be new or equivalent to new. Spare parts are warranted to be free from defects in material or workmanship for thirty (30) days or for the remainder of the Express Warranty Period of the Oricom branded product in which they are installed, whichever is longer. During the Express Warranty Period, Oricom will where possible repair and if not replace the faulty product or part thereof. All component parts removed under this Express Warranty become the property of Oricom. In the unlikely event that your Oricom product has a recurring failure, Oricom may always, subject to the Competition and Consumer Act 2010, at its discretion, elect to provide you with a replacement product of its choosing that is at least equivalent to your product in performance.

No change to the conditions of this Express Warranty is valid unless it is made in writing and signed by an authorised representative of Oricom.

Oricom will not be liable under this Express Warranty, and to the extent permitted by law will not be liable for any defect, loss, damage or injury arising out of or in connection with a:

4. Failure by you to adhere to the warnings and follow the instructions set out in this user guide for the proper installation and use of the product;
5. Willful misconduct or deliberate misuse by you of the product;
6. Any external cause beyond our control, including but not limited to power failure, lightning or over voltage; or
7. Modification to the product or services carried out on the product by anyone other than Oricom or Oricom's authorised service provider.



How to make a claim under your Express Warranty in Australia

Oricom has a simple warranty process for you to follow:

- Please call or email our Customer Support Team, 02 4574 8888 or support@oricom.com.au.
- A Customer Support Team member will verify after troubleshooting with you if your product qualifies under warranty. If so, they will give you a Product Return Authorisation number.
- We will then email a Return Authorisation form and a Repair Notice (if necessary), together with instructions on how to return the product for warranty service.

Please note that if a Customer Support Team member advises that your product does not qualify for return, this warranty does not apply to your product. Products that are authorised to be returned to Oricom in Australia must include all of the following:

- A completed Return Authorisation form
- A copy of your Proof of Purchase (please keep your original copy)
- The faulty product, including all accessories.

Send the approved returns to:

Oricom International Pty Ltd
Locked Bag 658
South Windsor NSW 2756 Australia

Please note that this Express Warranty excludes expenses incurred by you in returning any faulty product to us. You must arrange and pay any expenses incurred (including postage, delivery, freight, transportation or insurance of the product) to return the faulty product to us, however, we will arrange delivery of the repaired or replaced faulty product to you.



Important Information - Repair Notice

Please be aware that the repair of your products may result in the loss of any user-generated data (such as stored telephone numbers, text messages and contact information). Please ensure that you have made a copy of any data saved on your product before sending for repair. Please also be aware that products presented for repair may be replaced by refurbished products or parts of the same type rather than being repaired.

Oricom Customer Support

Oricom have a trained and dedicated team of Customer Support Representatives, each with the knowledge and resources to assist in answering your questions quickly and efficiently.

Oricom Support - Australia

For all product enquiries, troubleshooting or to discuss the range of Oricom products, feel free to contact Oricom or visit our website for answers to frequently asked questions.

(02) 4574 8888 / Monday - Friday 8am – 6pm AEST

Email: support@oricom.com.au / www.oricom.com.au

Oricom Support - New Zealand

0800 674 266 / Monday - Friday 10am - 8pm NZST

Email: support@oricom.co.nz



10. Technical Specifications

BABY UNIT

Frequency	2400 MHz to 2483.5 MHz
Image sensor	color CMOS 1M Pixels
Operating Temperature	5°C to 40°C
Power Adapter:	Input: 100-240V AC, 50/60Hz, 500mA; Output: 5.0V DC, 1500mA



PARENT UNIT

Frequency	2400 MHz to 2483.5 MHz
Display	5" diagonal IPS LCD (touch screen)
Operating Temperature	5°C to 40°C
Power Adapter:	Input: 100-240V AC, 50/60Hz, 500mA; Output: 5.0V DC, 1500mA WARNING <i>Use only with provided power supply.</i>
Battery (built-in)	TMB i9300 3.8V, 2100mAh Lithium-Ion Polymer, rechargeable battery pack WARNING <i>Do not attempt to replace the battery, but contact customer Service if it needs replacing.</i>

Specifications are subject to change without prior notice.



oricom®

All rights reserved

