



Folding size :90\*120mm  
 Unfold size :540\*120mm



Ver: 1.0

## User Guide



**Model: SC340**

The pictures are for reference only.

KEEP THIS USER GUIDE FOR FUTURE REFERENCE  
 Always retain your proof of purchase in case of warranty service. AUSTRALIA:  
[www.oricom.com.au](http://www.oricom.com.au)

Thank you for purchasing the SC340 Baby Monitor. You can now see and hear your baby sleeping or playing in their room anytime.

Please retain your original dated sales receipt for your records. For warranty service of your product, you will need to provide a copy of your dated sales receipt to confirm warranty status. Registration is not required for warranty coverage.

**SC340 Pack Includes**

Parent unit x 1	Camera unit x 1	Power adaptor x 2
User manual x 1	Wall-mounting kit x 1	

**1. IMPORTANT SAFETY INFORMATION**

It is very important that you read the User Guide carefully as it contains detailed information you will need to get the most from your Oricom baby monitor. If you have any issues setting up or using your Oricom baby monitor, please call our Customer Support team.

- Your Oricom baby monitor is designed to be an aid and should not be used as a substitute for responsible and proper adult supervision.
- The baby monitor has been designed to provide some added reassurance in the form of sound and video transmission for those times when you are not in the same room as your baby, provided you always stay within hearing range of the baby monitor during use. Your baby monitor is not a medical device, nor a device to prevent cases of Sudden Infant Death Syndrome (SIDS) or "cot death", and you should not rely on it for your baby's wellbeing. It is important that you regularly check on your baby personally.
- Make sure the baby unit, parent unit and mains adaptor cables are kept out of reach of your baby and other young children at all times.
- Never place the baby unit or parent unit inside your baby's cot, bed or playpen.
- Never cover the parent or baby units with clothes, towels, blankets or any other item. Never use or place your parent or baby unit in or near moisture or water (e.g. near bath or pool). Immersing in water could cause electric shock and even death.
- The installation location plays an important role in ensuring proper operation. Therefore, maintain a distance of at least one metre from other electronic equipment, such as microwave ovens or Wi-Fi devices, otherwise they could cause interference. During continual use, the baby unit power adaptor may become warm to the touch. This is normal and should not be a concern.

**Warning**

Risk of suffocation!  
 Keep all packaging materials and protective foils out of reach of children.

**Battery safety**

- Batteries represent a hazard to health and the environment!
- They contain toxic, ecologically hazardous heavy metals. Do not dispose of batteries in a fire as they may explode. Dispose of batteries according to local regulations, never in your household rubbish.
- Do not dismantle, cut, open, crush, bend, puncture, or shred cells or batteries. If a battery leaks, do not let the battery liquid touch skin or eyes. If this happens, immediately flush the affected areas with water, and seek medical assistance.
- Do not modify, remanufacture, attempt to insert foreign objects into the battery, or immerse or expose it to water or other liquids. Batteries may explode if damaged.
- Use only the battery supplied with the product. Improper use, or use of unapproved batteries, may present a risk of fire, explosion, or other hazard, and may void warranty.
- If you believe the battery is damaged, disconnect parent unit from the charger and stop using the baby monitor. Contact Oricom Support for assistance. Never use a damaged battery.
- If monitor will not be used for a long time, charge battery to 40%~50% capacity, store in a dry environment at about 25°C. Charge and discharge battery every 3 months.

**Disposal**

Always dispose of your products at the end of their life in accordance with your local waste disposal requirements.

**Packaging materials** including cardboard and paper packaging, should be recycled in accordance with your local council waste regulations.

**2. TABLE OF CONTENTS**

IMPORTANT SAFETY INFORMATION ..... 1  
 TABLE OF CONTENTS ..... 2  
 GETTING STARTED ..... 3  
 PRODUCT OVERVIEW ..... 3  
 KEY OPERATION ..... 4  
 MENU OPERATION ..... 5  
 TECHNICAL DATA ..... 8  
 TROUBLE SHOOTING ..... 8  
 MAINTENANCE ..... 9  
 DISPOSAL GUIDE FOR BATTERY AND PRODUCT ..... 9  
 EXPRESS WARRANTY (AUSTRALIA) ..... 10

**3. GETTING STARTED**

**3.1 TURN ON THE BABY UNIT (CAMERA):**

 
1. Insert the DC plug of the power adaptor into the DC Jack in the rear of the Baby Unit.
2. Insert the other end of the power adaptor into a suitable electrical outlet.
3. Once the adaptor is connected, the power LED will light up.
4. Keep the baby unit plugged in to mains power.

**3.2 TURN ON THE PARENT UNIT:**

1. Insert the DC plug of the power adaptor into the DC Jack in the side of the parent unit.
2. Insert the other end of the power adaptor into a suitable electrical outlet.
3. Press and hold the power key for 3 seconds.
4. Once parent unit is on, the power LED will light up and the image will display on the LCD.

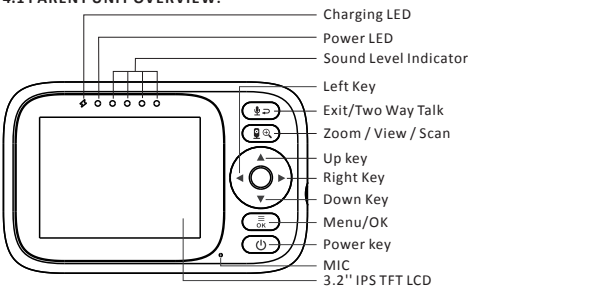
**Note:** For best range, make sure the antenna is extended whilst in use.

**3.3 INFRARED NIGHT VISION (AUTOMATIC)**

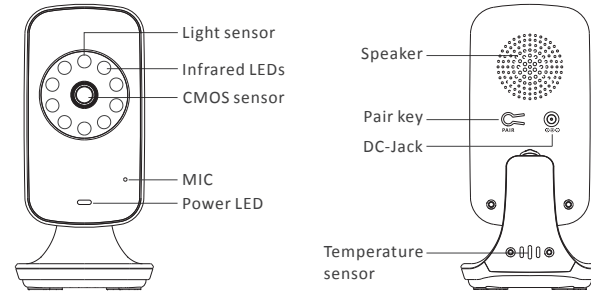
The infrared night vision function allows the camera to pick up images in dark or low light conditions. In this mode, only black and white images will be displayed on the monitor, for optimum image quality place baby unit 2 meters away from Baby. When the camera is in night vision mode, the  icon will be displayed on the top of screen.

**4. PRODUCT OVERVIEW**

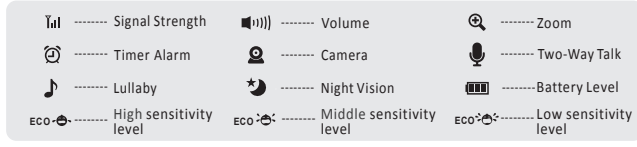
**4.1 PARENT UNIT OVERVIEW:**



**4.2 BABY UNIT OVERVIEW:**

 


**4.3 ICONS OVERVIEW:**

 
 


**5. KEY OPERATION**

 
 
**5.1 POWER SAVE / SCREEN OFF**

Short press the power  key to turn on / off the screen.

 
 
**5.2 VOLUME ADJUSTMENT**

Press the  key to increase the volume; Press the  key to decrease the volume.

 

 
 
 

**5.3 BRIGHTNESS ADJUSTMENT**

Press the  key to decrease the brightness; Press the  key to increase the brightness.

**5.4 CAMERA VIEW / SCAN**



Press Scan  key to view / scan camera; During scan mode, the scan icon  will be displayed on the top of screen. And each camera's video will stay on the LCD around 10 seconds and then turn to next camera alternately.

**5.5 DIGITAL ZOOM**

Press and hold the  key around 2 seconds to operate Zoom in / out; IN Zoom mode, press the  key to Pan left; press  key to Pan right; press  key to pan up; press  key to pan down; During digital zoom mode, the zoom icon  will be displayed on the top of screen.

**Note:** Volume and brightness adjustments are disabled whilst in zoom mode.

**5.6 TALK TO BABY**



When view is in full screen mode, press and hold  key to enter parent unit talking mode. A microphone icon  will be displayed in the corner of the LCD screen. Release the key to stop.

**Note:** When you are in parent unit talking mode, the parent unit speaker is muted. Normal operation is listening only from camera unit.


**6. MENU OPERATION**



**6.1 PAIRING THE CAMERA AND PARENT UNITS**



The baby unit is pre-registered to your parent unit. You do not need to register it again unless the baby unit loses its link with the parent unit. To re-register your baby unit, or register a new baby unit, follow the procedure below:





**Note:** Camera icon with  "✓" means it is registered. You should select and pair with the camera icon without  "✓" sign.

 
**6.1.1 ADD CAMERA**


1. Press the MENU  key then the menu will pop up.

2. Press the  key to select the camera icon .

3. Press OK  key to enter sub-menu, then press  key to select your desired camera.





 






4. Press  key enter into sub-menu; Press  key to select  then press  key.

5. When the icon  displays on the LCD screen, press the PAIR button on the back of camera.

6. Once paired, Successful pairing icon  shows on the LCD screen.

7. If fails, repeat the above steps.

**6.1.2 DELETE CAMERA**

1. Press the MENU  key.
2. Press the  key to select the camera icon .
3. Press OK  key to enter into sub-menu, then press  key to select the camera you want to delete.
4. Press  key enter into sub-menu; Press  key to select  then press  key.
5. Press  key to select  icon to delete the camera.
6. Press OK  key to confirm the option.

**6.2 TEMPERATURE UNIT SETTING**

1. Press the MENU  key.
2. Press the  key to select the temperature icon .
3. Press the  key enter into sub-menu.
4. Press the  key to select the  or  for setting temperature unit.
5. Press  key to confirm.

**Note:** The detected temperature range is 0~50°C.

**6.2.1 TEMPERATURE ALARM SETTING**

1. Press the  key to select  to turn on alarm function; Press  key to confirm.
2. Press the  key to select  to turn off alarm function; Press  key to confirm.


 
 


 
 
 
**6.2.2 SET TEMPERATURE HI/LO ALERT LIMITS**

1. Press  key to select  or  for Hi/Low limits settings.
2. Press  keys to adjust the Hi limit when  (red) is selected.
3. Press  keys to adjust the Lo limit when  (green) is selected.

**Note:** The High temperature alarm range is 20~40°C, and the Low temperature alarm range is 0~19°C. The high temperature alarm default setting is 36°C, and the low temperature alarm default setting is 8°C. When the temperature goes above or below the settings, the temperature icon turns red, flashes, alerts user by audio beeps. Press any key on the parent unit to stop beeping and flashing.

 
 
 
 


**6.3 LULLABY SETTING**

You can soothe the baby to sleep by playing a gentle lullaby from the Camera unit.

1. Press the MENU .
2. Press the  key until the lullaby icon  is selected.
3. Press the  key to enter sub-menu.
4. Press the  key to select one of the 8 available lullabies, and you can pick single playback, loop (all 8 lullabies) playback  or stop .
5. Press  key to confirm.

**Note:** The lullaby default setting is OFF.

**6.4 TIMER SETTING**

1. Press the MENU  key.
2. Press the  key until the Timer icon  is selected.
3. Press the  key to enter sub-menu, Press the  key to select the alarm time you need.
4. Press  key to confirm.

**Note 1:** The minimum is 0.5 hour. The maximum setting is 5 hours (7 levels).

**Note 2:** Once the alarm is turned on, alarm icon will display on the top of the screen.







**Note 3:** The alarm default setting is OFF.


**Note 4:** When the alarm is ringing, press any key on the parent unit to turn the alarm off.

**Note 5:** If you don't turn off the alarm, the alarm will ring for 1 minute. After three minutes the alarm will ring again for 1 minute. The alarm will ring for three times in total, after this the alarm goes off.

**6.5 ENERGY SAVING (ECO MODE)**

This mode allows you to control the sound activation of your baby unit. If there is no sound around the baby unit within 30 seconds, audio transmission is muted and parent unit screen is turned off. When the baby unit detects any sounds louder than the sensitivity level, the audio and the parent unit screen will turn on. To change the ECO level, please follow the below instructions:

1. Press the MENU  key.
2. Press the  key until the ECO icon  is selected.
3. Press  key to enter sub-menu, then press  key to select desired level.
4. Press  key to confirm.

**Note:**  is Low sensitivity level, a loud sound is needed to activate the ECO function.

**Note:**  is Middle sensitivity level.

**Note:**  is High sensitivity level, a low sound is needed to activate the ECO function.

**6.6 LANGUAGE SETTING**

1. Press the MENU  key.
2. Press the  key until the language icon  is selected.
3. Press  key to enter sub-menu, then press  key to select the language.
4. Press  key to confirm.

**7. TECHNICAL DATA**

Frequency	2412~2469 MHz
Power adaptor Input	Input: 100-240VAC 50/60Hz Output: 5V DC 1A
Operating Range	Up to 1000ft (300m) outdoor line of sight Up to 165ft (50m) indoor
Display	3.2" IPS TFT LCD
Battery (Parent Unit)	Li-Ion 3.7V 1250mAh (4.625Wh)
Battery Life	Up to 6 hours
Camera unit and parent unit RF power (for CE)	<19 dBm
Operation environment	Operation Temperature: +32F~+104F (0°C~40°C) Battery Charging Temperature: +50F~+104F (10°C~40°C) Relative Humidity: 15%-85%

**8. TROUBLE SHOOTING**

No Reception on The Monitor	<ul style="list-style-type: none"> <li>* The power adaptors may not be properly connected.</li> <li>* Confirm that both Camera and Parent units are ON.</li> <li>* Camera may be far away from the Parent unit.</li> <li>* Camera and Parent unit may not be paired; follow PAIRING instructions.</li> </ul>
Interference or Poor Reception	<ul style="list-style-type: none"> <li>* Move the Parent unit closer to the Camera.</li> <li>* The camera or Parent unit may be placed close to many metal objects.</li> <li>* Other electronic devices may be interfering with the signal.</li> <li>* The battery power may be low.</li> </ul>
Audio Feedback (High Pitched Noise)	<ul style="list-style-type: none"> <li>* The Camera and Parent unit may be placed too close.</li> <li>* The volume on the Parent unit may be set too high.</li> </ul>
Frozen Picture on Screen	<ul style="list-style-type: none"> <li>* Power cycle the Camera (switch off the power to the adaptor, wait a few seconds, then switch on again).</li> <li>* Press the RESET key at the back of parent unit.</li> </ul>

**9. MAINTENANCE**

- \* Clean your baby monitor with a slightly damp or anti-static cloth.
- \* Never use cleaning agents or solvents.

**10. DISPOSAL GUIDE FOR BATTERY AND PRODUCT**

- \* Do not attempt to repair or adjust any of the electrical or mechanical functions of the unit.
- \* Remember to dispose of the product in an environmentally responsible way.
- \* For proper collection and disposal, take them to the collection points designated by local authorities. Do not dispose of in household waste bins.

The Li-Ion battery contained within the Parent unit is not user replaceable. CAUTION: Risk of Fire and Burns. Do Not Open, Crush, expose to excessive heat or Incinerate. Follow Manufacturer's Instructions.

**Express Warranty (Australia)**

This Express Warranty is provided by Oricom International Pty Ltd ABN 46 086 116 369, Unit 1, 4 Sovereign Place, South Windsor NSW 2756, herein after referred to as "Oricom". Oricom warrants that the product is free from defects in materials or workmanship during the Express Warranty Period. This Express Warranty does not extend to any product from which the serial number has been removed or was purchased outside of Australia.

The benefits of this Express Warranty are in addition to other rights and remedies you may have under the Australian Consumer Law. Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure. In the event of a minor failure, Oricom reserves the right to choose to repair or replace the product.

The Express Warranty Period will be a period of 2 years beginning on the date of purchase of the product evidenced by your dated sales receipt. You are required to provide proof of purchase as a condition of receiving Express Warranty services. You are entitled to a replacement product or repair of the product at our discretion according to the terms and conditions of this document if your product is found to be faulty within the Express Warranty Period. This Express Warranty extends to the original purchaser only and is not transferable.

Products distributed by Oricom are manufactured using new materials or new and used materials equivalent to new in performance and reliability. Spare parts may be new or equivalent to new. Spare parts are warranted to be free from defects in material or workmanship for thirty (30) days or for the remainder of the Express Warranty Period of the Oricom branded product in which they are installed, whichever is longer. During the Express Warranty Period, Oricom will where possible repair and if not replace the faulty product or part thereof. All component parts removed under this Express Warranty become the property of Oricom. In the unlikely event that your Oricom product has a recurring failure, Oricom may always, subject to the Competition and Consumer Act 2010, at its discretion, elect to provide you with a replacement product of its choosing that is at least equivalent to your product in performance. No change to the conditions of this Express Warranty is valid unless it is made in writing and signed by an authorised representative of Oricom. Oricom will not be liable under this Express Warranty, and to the extent permitted by law will not be liable for any defect, loss, damage or injury arising out of or in connection with a:

1. Failure by you to adhere to the warnings and follow the instructions set out in this user guide for the proper installation and use of the product;
2. Willful misconduct or deliberate misuse by you of the product;
3. Any external cause beyond our control, including but not limited to power failure, lightning or over voltage; or
4. Modification to the product or services carried out on the product by anyone other than Oricom or Oricom's authorised service provider.

**How to make a claim under your Express Warranty in Australia**

Oricom has a simple warranty process for you to follow:

- Please call or email our Customer Support Team, 02 4574 8888 or support@oricom.com.au.
- A Customer Support Team member will verify after troubleshooting with you if your product qualifies under warranty. If so, they will give you a Product Return Authorisation number.
- We will then email a Return Authorisation form and a Repair Notice (if necessary), together with instructions on how to return the product for warranty service.

Please note that if a Customer Support Team member advises that your product does not qualify for return, this warranty does not apply to your product. Products that are authorised to be returned to Oricom in Australia must include all of the following:

- A completed Return Authorisation form
- A copy of your Proof of Purchase (please keep your original copy)
- The faulty product, including all accessories.

Send the approved returns to:  
 Oricom International Pty Ltd  
 Locked Bag 658  
 South Windsor NSW 2756 Australia

Please note that this Express Warranty excludes expenses incurred by you in returning any faulty product to us. You must arrange and pay any expenses incurred (including postage, delivery, freight, transportation or insurance of the product) to return the faulty product to us, however, we will arrange delivery of the repaired or replaced faulty product to you.

**Important Information**

**Repair Notice**

Please be aware that the repair of your products may result in the loss of any user-generated data (such as stored telephone numbers, text messages and contact information). Please ensure that you have made a copy of any data saved on your product before sending for repair. Please also be aware that products presented for repair may be replaced by refurbished products or parts of the same type rather than being repaired.